



Sony Ericsson

Sony Ericsson
Xperia Ray
Menu Map





Contents

	Page
Applications.....	3
Back key.....	10
Home Key.....	11
Menu key.....	12
Power lock key.....	13
Settings.....	14



Applications

Level 1 Menu	Level 2 Menu	Level 3 Menu	Level 4 Menu	Level 5 Menu	Level 6 Menu
Your Orange					
Orange Wednesday					
Traffic TV					
Contacts	Search	Enter number/name			
	New contact	First name			
		Last name			
		Number			
		Email			
		Add field			
		Done			
		Cancel			
	Phone	Enter number	Call		
			Add to contacts	Create new contact	
				Select existing	
	Call log	Select from list	Call again		
			Send SMS message		
			Add to contacts		
		Menu key	Clear call log		
	Contacts	Select from list	Send msg		
			Favourite		
			Edit		
			Info		
			Menu	Delete contact	
				Send contact	
		Menu key	Import contacts		
			Back up contacts		
			Filter		
			Send contacts		
			Delete contacts		
			Settings	Accounts & Sync	Background Data
					Auto-Sync
				Service dial number	Add account
Phone	Phone	Enter number	Call		
			Add to contacts	Create new contact	
				Select existing	
	Call log	Select from list	Call again		
			Send SMS message		
			Add to contacts		
		Menu key	Clear call log		
	Contacts	Search	Enter number/name		
		New contact	First name		
			Last name		
			Number		
			Email		
			Add field		
			Done		
			Cancel		
		Select from list	Send msg		
			Favourite		
			Edit		
			Info		
			Menu	Delete contact	
				Send contact	
		Menu key	Import contacts		
			Back up contacts		
			Filter		
			Send contacts		
			Delete contacts		
			Settings	Accounts & Sync	Background Data
					Auto-Sync
				Service dial number	Add account

Messaging	Inbox	New message	Add Recipient	Enter Name or Number	Done
				Select from Contacts	
			Write Message		
			Add	Add picture	
				Take Photo	
				Add video	
				Record video	
				Add sound	
		Select current message	Forward Message		
			Delete Message		
		Menu	Delete Several		
			Settings	Delivery report	
				Notifications	
				Notification tone	
				Notification vibration	
				SIM messages	
				Push Settings	
Browser	Enter URL	Bookmarks			
		Most visited			
		History			
	Menu Key	New window			
		Bookmarks			
		Windows	New window		
			Select window		
		Refresh			
		Forward			
		More	Add bookmark		
			Find on page		
			Select text		
			Page info		
			Share page		
			Downloads		
			Settings	Text size	
				Default zoom	
				Open pages in overview	
				Text encoding	
				Block pop-up windows	
				Load images	
				Auto-fit pages	
				Landscape-only display	
				Enable JavaScript	
				Enable plug-ins	
				Open in background	
				Set homepage	
				Clear cache	
				Clear history	
				Accept cookies	
				Clear all cookie data	
				Remember from data	
				Clear form data	
				Enable location	
				Clear location access	
				Remember passwords	
				Clear passwords	
				Show security warnings	
				Set search engine	
				Website settings	
				Reset to default	
Timescape	Tap tile to setup	Select service	Enter login details		
		Done			
Settings	See Settings Menu				
Setup Guide	Follow Steps				
Music	Music Folder	Search music	Enter text		
		Artists	List of songs		

		Albums	List of albums		
		Tracks	List of tracks		
		Playlists	List of playlists		
		Menu	Send several		
			Delete several		
	Search functions				
	Now playing	Save as playlist			
	Back				
	Play				
	Forward				
	Timeline				
	Menu Key	Sound settings	xLOUD	Tick/Untick	
			Silent mode	Tick/Untick	
			Vibrate	Select from list	
			Volume	Set level	
			Phone ringtone	Select from list	
			Notification ringtone	Select from list	
			Audible touch tones	Tick/Untick	
			Audible selection	Tick/Untick	
			Screen lock sounds	Tick/Untick	
			Haptic feedback	Tick/Untick	
		Equalizer	Select from list		
		Set as ringtone			
Gallery	Camera				
	Images				
	Videos				
	Load camera				
Alarms	Add Alarm	Set time	Set		
			Cancel	Repeat	Tick/Untick
				Ring tone	
				Vibrate	Tick/Untick
				Label	Enter text
				Done	
				Revert	
				Delete	
	List of current Alarms				
	Menu key	Desk Clock			
		Add Alarm			
		Settings	Alarm in Silent mode	Tick/Untick	
			Alarm volume	Set level	
			Snooze duration		
			Volume and Camera	None	
				Snooze	
				Dismiss	
Camera	CAPTURE (button on side)				
	Flash	Auto			
		Fill flash			
		Off			
		Red-eye reduction			
	Self timer	On - 10 secs			
		On - 2 Secs			
		Off			
	Switch camera	Normal camera			
		Front facing			
	Resolution	5M 4:3			
		3M 16:9			
		2M 4:3			
		2MP 16:9			
	Capturing mode	Normal			
		Scene recognition			
		Smile detection			
	Menu key	Shutter sound	Select from list		
		Geotagging	On		
			Off		
		Touch Capture	On		
			Off		
	Recording mode	Camera			
		Video	Scenes	Off	
				Portrait	

				Landscape	
				Night mode	
				Beach and snow	
				Sports	
				Party	
			Video size	HD 720p	
				Full wide VGA	
				VGA	
				QVGA	
				Multimedia message	
			Switch camera	Normal camera	
				Front facing	
			Self timer	On - 10 secs	
				On - 2 Secs	
				Off	
			Microphone	On	
				Off	
			Menu key	Shutter Sound	Select from list
Email	Follow steps				
Market	Follow setup instructions to create account	Featured Applications	List of Applications		
		Applications	All applications	List of Applications	
			Communication	List of Applications	
			Entertainment	List of Applications	
			Finance	List of Applications	
			Lifestyle	List of Applications	
			Multimedia	List of Applications	
			News and weather	List of Applications	
			Productivity	List of Applications	
			Reference	List of Applications	
			Shopping	List of Applications	
			Social	List of Applications	
			Tools	List of Applications	
			Travel	List of Applications	
			Demo	List of Applications	
			Software libraries	List of Applications	
		Games	All Games	List of Applications	
			Arcade and action	List of Applications	
			Brain and puzzle	List of Applications	
			Cards and casino	List of Applications	
			Casual	List of Applications	
		Search	Enter keywords	List of Applications	
		My downloads	List of downloaded Apps		
Facebook	Connects to internet	Enter login details			
Calendar	Select day				
	Select time	Subject	Enter text		
		Time	Start time		
			End time		
			All day	Slide	
		Date	Start date		
			End Date		
		Reminder	Select from List		
		Location	Enter text		
		Description	Enter text		
		Recurrence	Select from List		
		Delete appointment			
	Menu key	Agenda			
		Day			
		Week			
		Month			
		New event			
		Today			
		More	My calendars		
			Delete all events		
			Settings	Hide declined events	
				Days in week view	
				Use home time zone	
				Home time zone	
				Smart keyboard	Tick/Untick

				Set alerts and notifications	
				Select ringtone	
				Vibrate	
				Default reminder time	
				Build version	
Maps	Search Maps				
	Points of interest				
	Layers	Traffic			
		Satellite			
		Terrain			
		Buzz			
		Latitude			
		Clear Map			
		More Layers			
	My Location				
	Zoom in				
	Zoom out				
	Menu Key	Search	Enter text		
		Directions	Start point		
			End point		
			Method	Car	
				Bus	
				Walking	
			Go		
		Starred places	list of places		
		Clear map			
		Join Latitude			
		More	Labs		
			Sign in		
			Cache settings		
			Help		
			Terms, Privacy & Notices		
			About		
Gmail	Follow instructions				
Talk	Launches App				
Navigation	Speak destination				
	Type destination				
	Contacts				
	Starred places				
	Settings				
	Map				
Places	Select Point of Interest				
Latitude					
Support	Search				
	Popular topics				
	More topics				
	Quick usage tips				
	Video tutorials				
	User guide				
	Tools	Battery saver			
		Settings download			
		Register			
	Contact Sony Ericsson				
Sync	Username				
	Password				
	Log in				
	Sign up				
	Forgot password				
Calculator	Menu key	Clear history			
		Advanced panel			
Track ID	Launches App				
You Tube	Launches App				
Friends and Music	Launches App				
News & Weather					
Downloads					
Adobe Reader					
Data monitor	Counting data since				

	Sent data				
	Received data				
	Total data				
	Settings	Month period			
		Since date			
UEFA.com	Connects to web				
Power save mode	Activate/deactivate power save mode				
	Settings	Wi-Fi	Turn on		
			Turn off		
			keep current settings		
		Bluetooth	Turn on		
			Turn off		
			keep current settings		
		GPS	Turn on		
			Turn off		
			keep current settings		
		Brightness	Customize brightness		
			keep current settings		
		Screen timeout	15 seconds		
			30 seconds		
			1 minute		
			2 minutes		
			10 minutes		
			30 minutes		
		Animation	No animations		
			Some animations		
			All animations		
			keep current settings		
		Background data traffic	Turn on		
			Turn off		
			keep current settings		
		Auto-sync	Turn on		
			Turn off		
			keep current settings		
		Notification	Notification settings	20%	
				40%	
				60%	
				80%	
				Turn off	
			Activate automatically	Tick/Untick	
			Notification bar	Tick/Untick	
Office suite	Phone	Browse files			
	Memory card	Browse files			
	Office suite pro				
Google search	Enter text	Results from web			
Xperia Hot Shots	Launches App				
Voice search	Speak now	List of results via web			
	Cancel				
Connected devices	Server name				
	Media server				
	Change server name				
	Client device list				
	Wi-Fi Settings				
	About				
Update center	Menu key	Refresh			
		Settings	Auto update	Tick/Untick	
FM Radio					
Extension search	Enter text				
Clock	Alarms	Add Alarm	Set time	Set	
				Cancel	Repeat
					Ring tone
					Vibrate
					Label
					Done
					Revert
					Delete
		List of current Alarms			
		Menu key	Desk Clock		

			Add Alarm		
			Settings	Alarm in Silent mode	Tick/Untick
				Alarm volume	Set level
				Snooze duration	
				Volume and Camera	None
					Snooze
					Dismiss
LiveWare manager	Headset				
	Headphones				
	Charger				
	Menu key	Add Bluetooth device			
		About			
		Check for updates			
Orange Plus					



Back key

Level 1 Menu	Level 2 Menu	Level 3 Menu	Level 4 Menu	Level 5 Menu	Level 6 Menu
Returns to previous menu					



Home key

Level 1 Menu	Level 2 Menu	Level 3 Menu	Level 4 Menu	Level 5 Menu	Level 6 Menu
Returns you to homescreen					
Long press activates recently accesed					



Menu key

[illegible]



Power/Lock key

Level 1 Menu	Level 2 Menu	Level 3 Menu	Level 4 Menu	Level 5 Menu	Level 6 Menu
Quick press activates screen lock	Quick press activates screen				
Long press opens phone options	Silent mode	On			
		Off			
	Airplane mode	On			
		Off			
	Power off				



Settings

Level 1 Menu	Level 2 Menu	Level 3 Menu	Level 4 Menu	Level 5 Menu	Level 6 Menu
Sony Ericsson	Connectivity	Install PC Companion	Tick/untick		
		USB connection mode			
		Auto connect in MSC	Tick/untick		
		Tethering & portable hotspot			
		No trusted hosts			
	Internet Settings	Connects for quick setup			
Wireless & networks	Airplane mode	Tick/untick			
	Wi-Fi	Tick/untick			
	Wi-Fi settings	Wi-Fi	Tick/untick		
		Network notification	Tick/untick		
		Add Wi-Fi network			
	Bluetooth	Tick/untick			
	Bluetooth settings	Bluetooth	Tick/untick		
		Device name	Enter text		
		Discoverable	Tick/untick		
		Scan for devices			
	Tethering & portable hotspot				
	VPN Settings	Add VPN			
	Mobile networks	Data enabled	Tick/untick		
		Data roaming	Select from list		
		Network mode	Select from list		
		Access point names			
		Network operators	Search mode		
			Search networks		
Call Settings	FDN numbers	Activate FDN			
		Change PIN2			
		FDN list			
	Voicemail service				
	Voicemail settings	Enter Voicemail number			
	Call forwarding	Always forward	Enter number	Enable	
		Forward when Busy	Enter number	Enable	
		Forward when unanswered	Enter number	Enable	
		Forward when unreachable	Enter number	Enable	
	Call Barring				
	Additional settings	Caller ID	Network default		
			Hide number		
			Show number		
		Call waiting	Tick/untick		
	Noise suppression	Tick/untick			
	Accounts	Receive incoming calls	Tick/untick		
		Accounts			
	Use Internet calling	Select from list			
Sound	xLOUD	Tick/untick			
	Silent mode	Tick/untick			
	Vibrate	Select level			
	Volume	Select level			
	Phone ringtone	Select tone			
	Notification ringtone	Tick/untick			
	Audible touch tones	Tick/untick			
	Audible selection	Tick/untick			
	Screen lock sounds	Tick/untick			
	Haptic feedback	Tick/untick			
Display	Mobile Bravia engine	Tick/untick			
	Brightness				
	Auto rotate screen	Tick/untick			
	Animation	No animation			
		Some animations			
		All animation			

	Screen timeout	Select from list			
	Theme				
Location and security	Use wireless networks	Tick/untick			
	Use GPS	Tick/untick			
	Setup screen lock	Tick/untick			
	Set up SIM card lock	Lock SIM card	Tick/untick		
		Change SIM PIN			
	Visible passwords	Tick/untick			
	Select device admins				
	Use secure credentials	Tick/untick			
	Install from SD card				
	Set password				
	Clear storage				
Applications	Unknown sources	Tick/untick			
	Manage applications	Select from list	About		
			Clear data		
			Clear cache		
			Clear defaults		
			Force stop		
	Running services				
	Storage use				
	Battery use				
	Development	USB debugging	Tick/untick		
		Stay awake	Tick/untick		
		Allow mock locations	Tick/untick		
Accounts and sync	Background data	Tick/untick			
	Activate auto-Sync	Tick/untick			
Privacy	Factory data reset				
	Settings reset				
Storage					
Language and keyboard	Select language				
	User dictionary				
	Keyboard settings				
Voice input and output	Voice recogniser settings				
	Text to speech settings				
Accessibility	Accessibility	Tick/untick			
Date and time	Automatic	Tick/untick			
	Set date				
	Select time zone				
	Set time				
	Use 24-hour format	Tick/untick			
	Select date format	Select from list			
About phone	Software updates	Update now	Ok/Cancel		
		Auto search	Tick/untick		
		Network	Select from list		
	Status	Battery status			
		Battery level			
		Voice MSISDN Line 1			
		Network			
		Signal strength			
		Mobile network type			
		Service state			
		Roaming			
		Mobile network state			
		IMEI			
		IMEI SV			
		Wi-Fi MAC address			
		Bluetooth address			
		Up time			
	Battery use	Display			
		Android system			
		Cell standby			
		Android OS			
	Legal information	HTC legal			
		Open source licenses			
		Google legal			
	User guide				
	Model number				
	Android version				

	Baseband version				
	Kernel version				
	Build number				